


38128 Bench Drill Press TBM

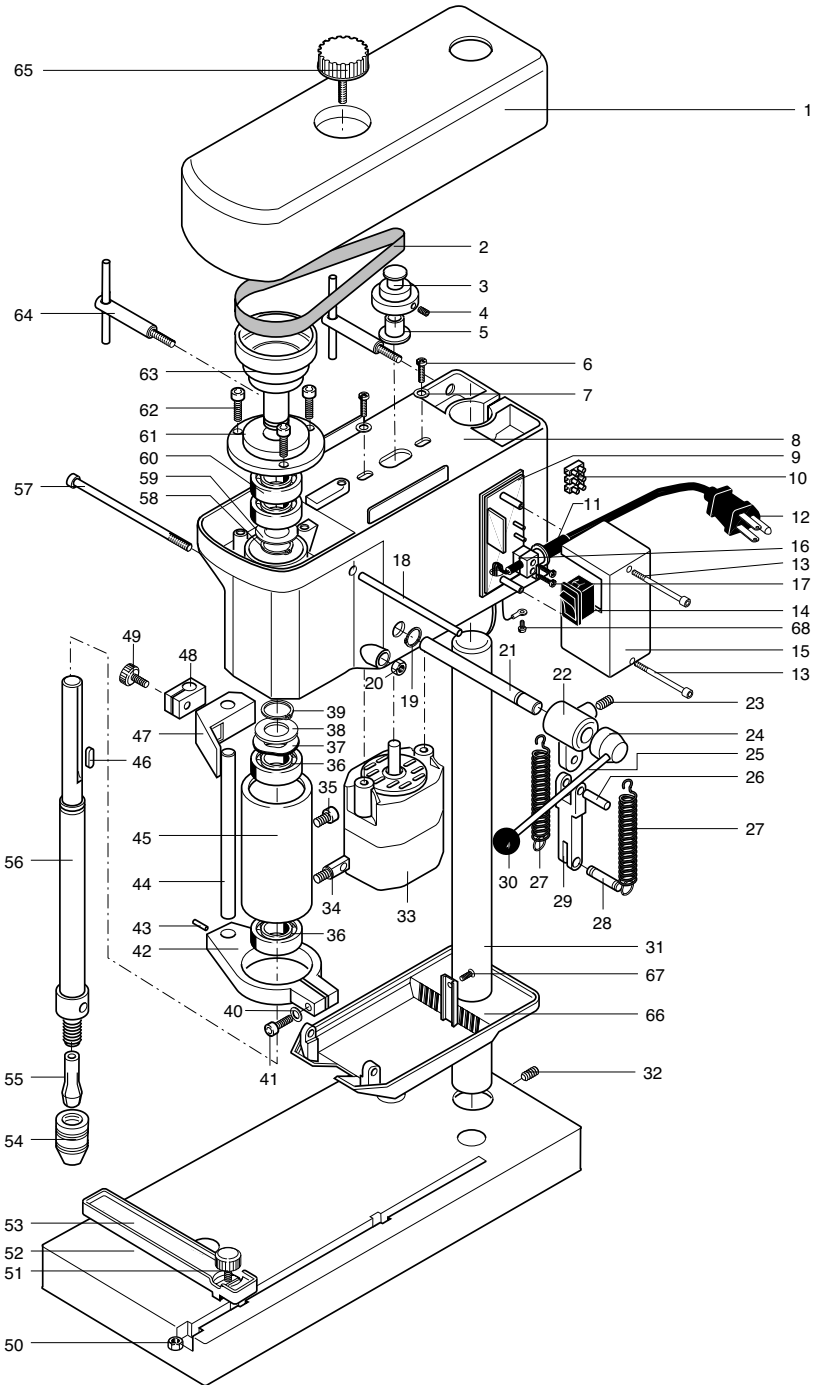

## ***Spare parts list***

Please order spare parts in writing from PROXXON Central Service  
(Address on back of instruction manual)

### **Drill press TBM 115**

Part No.:	Designation	Part No.:	Designation
28 128-01	Cover	28 128-36	Ball bearing
28 128-02	Drive belt	28 128-37	Corrugated washer
28 128-03	Motor belt pulley	28 128-38	Pulley
28 128-04	Set screw	28 128-39	Circlip
28 128-05	Flange sleeve	28 128-40	Washer
28 128-06	Motor mounting screw	28 128-41	Screw
28 128-07	Washer	28 128-42	Flange
28 128-08	Machine housing	28 128-43	Pin
28 128-09	Switch housing base	28 128-44	Rod
28 128-10	Connecting clamp	28 128-45	Sleeve
28 128-11	Anti-kink grommet	28 128-46	Feather key
38 128-12	Connection cable	28 128-47	Scale pointer
28 128-13	Fastening screw	28 128-48	Clamp
28 128-14	Machine switch	28 128-49	Knurled screw
28 128-15	Connection box	28 128-50	Nut
28 128-16	Strain relief	28 128-51	Knurled screw
28 128-17	Screw	28 128-52	Drill table
28 128-18	Rod	28 128-53	Stop
28 128-19	Circlip	28 128-54	Spigot nut
28 128-20	Nut	28 128-55	Drill chuck
28 128-21	Feed shaft	28 128-56	Drill spindle
28 128-22	Feed lever	28 128-57	Clamping screw
28 128-23	Set screw	28 128-58	Circlip
28 128-24	Connection	28 128-59	Pulley
28 128-25	Drill lever	28 128-60	Ball bearing
28 128-26	Pin	28 128-61	Flange
28 128-27	Spring	28 128-62	Fastening screw
28 128-28	Pin	28 128-63	Belt pulley, drill spindle
28 128-29	Fork	28 128-64	Toggle screw
28 128-30	Ball head	28 128-65	Knurled screw
28 128-31	Steel column	28 128-66	Lower housing cover
28 128-32	Set screw	28 128-67	Screw
38 128-33	Motor	28 128-98	Packaging
28 128-34	Retaining screw	28 128-99	Operating Instructions
28 128-35	Screw		